

When wiring the AirTac the 12/24 DC Voltage will need a switched current across the 2 vertical terminals.



2. Unscrew the top of the AirTac to get access to the terminal.

1. Switch the 12/24 DC Voltage current across labels **1** and **2**.

